


Two Piece Threaded Full Port Ball Valve Installation Instructions

1. Clean and inspect piping threads on all fittings before installation.
2. Open the valve from full open to the closed position.
3. PTFE thread sealant is recommended. Follow the thread sealant instructions for proper use. Sealant should be installed on the pipe not the ball valve.
4. When possible tighten the pipe in a vise and turn the ball valve onto the pipe threads. If a vise is not available or practical use a pipe wrench on the pipe to hold the pipe as you turn the ball valve onto the pipe threads.
5. Use a smooth-jawed wrench on the valve end on the same side of the valve to which the pipe is being installed and the vise or pipe wrench is being used.
6. Be careful while reverse rotation of the ball valve during installation. Reverse rotation of the valve on the threads could compromise the body to tailpiece sealing, causing the valve to leak.

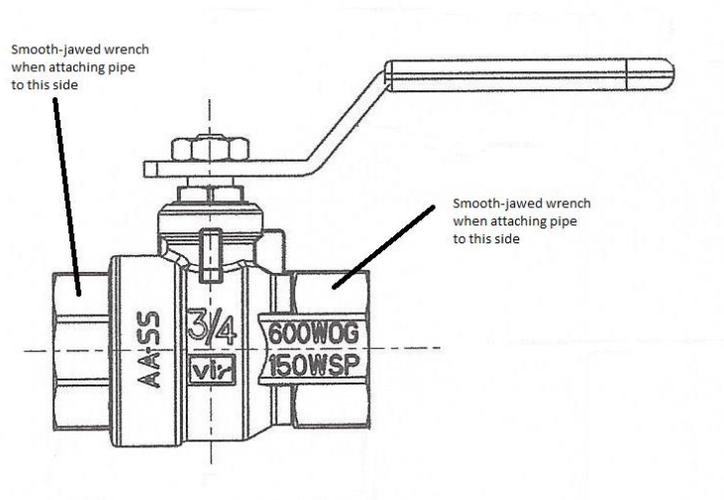

UNIVERSAL VALVE CO., INC.

478 Schiller Street - Elizabeth, New Jersey 07206
(800) 223-0741 (908) 351-0606 Fax: (908) 351-0369
e-mail: sales@universalvalve.com
visit us at: www.universalvalve.com
2011 Universal Valve Co., Inc.