


INSTALLATION INSTRUCTIONS

“SHURE SHEAR” U-CLAMP ANCHOR MODEL # 521KR

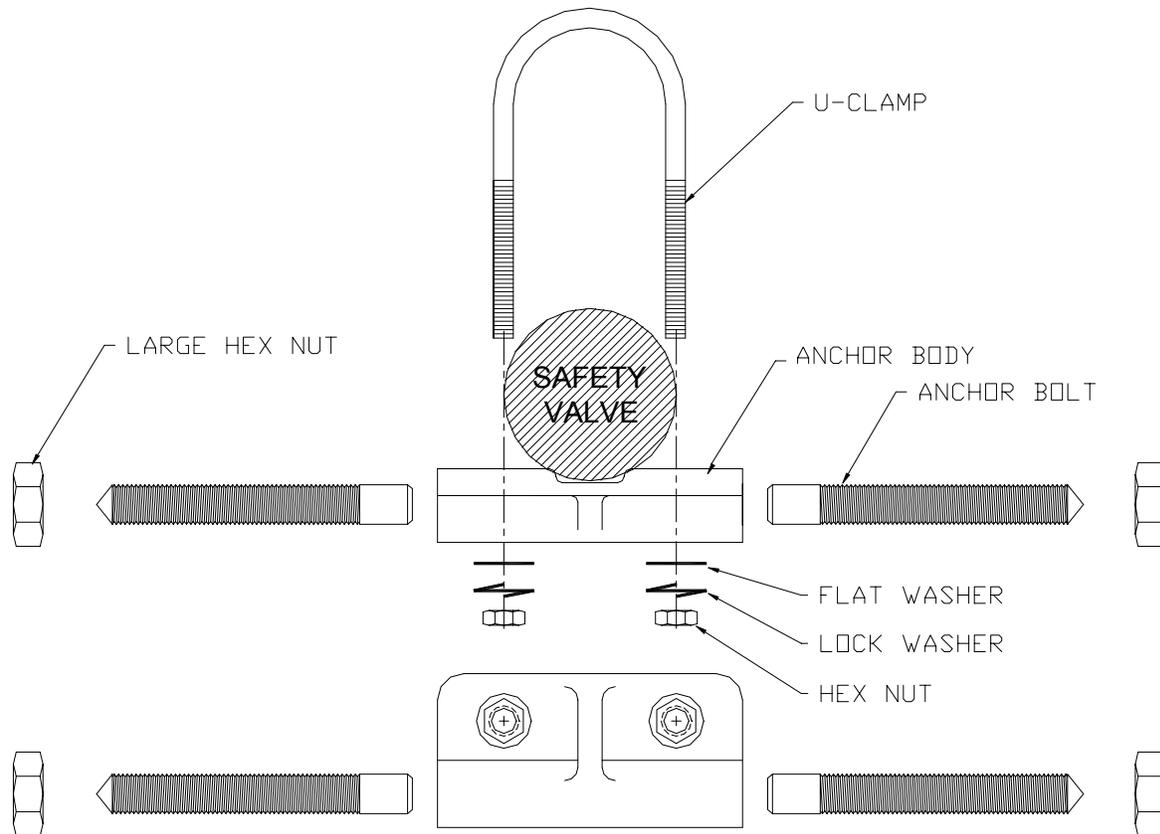

1. Place U-Clamp around lower body of the safety valve.
2. Slide the anchor body on U-Clamp ends
3. Make sure that the anchor body flush against flat side of the safety valve.
4. Place the flat washer, lock washer and hex nut on each U-Clamp end.
5. Tighten U-Clamp until safety valve fits tightly against anchor casting
6. Insert anchor bolts (tips pointed out) in fully retracted (inside flat ends touching) position
7. Tighten one large hex nut onto each anchor bolt.
8. Using grip pliers, hold anchor bolt and tighten large hex nuts until points have seated into cavity wall surface.
9. Make sure U-Clamp Safety Valve Anchor, as installed is securely anchored and makes a tight enough connection so the safety valve will shear if pump is hit, disturbed or dislocated.

Proven Performance



©2003 Universal Valve Co., Inc.

UNIVERSAL VALVE CO., INC.

478 Schiller Street • Elizabeth, New Jersey 07206
(800) 223-0741 • (908) 351-0606 • Fax: (908) 351-0369
e-mail: sales@universalvalve.com
visit us at: www.universalvalve.com

