


# INSTALLATION INSTRUCTIONS

## For 1100P Liquid Level Gauge & Sampler

- Before using the 1100P, it must be attached to a gauge stick procured by the customer.
- To affix Sampler tube to Gauge stick, place tube on gauge stick in desired location (the end of the tube must protrude beyond the gauge stick so that the poppet shaft is depressed when stick is pressed against floor of tank) and mark two holes to be drilled.
- Drill two 1/8" pilot holes for the wood screws in the locations marked.
- Fasten sampler tube onto gauge stick by threading screws into gauge stick in holes just drilled.
- Test operation by pushing stick on ground, making sure poppet opens when depressed.

### Operating Instructions

Be sure that the valve stem is only half open when the gauge stick bottom is in contact with the bottom of the tank so as not to apply severe pressure on the valve insert. Do not drop the gauge stick to the bottom of the tank. Lower it gently, push the gauge stick to open the valve and hold down for 5 seconds. Then lift the gauge stick out of tank and inspect for separation of product. Repeat test.

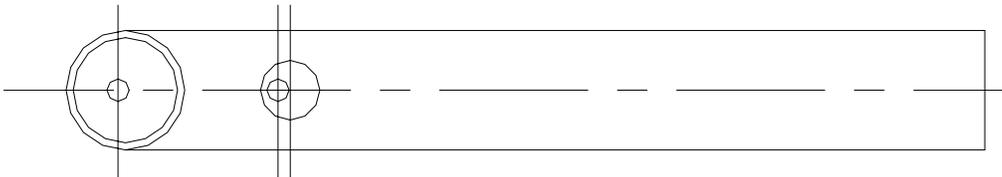

### Proven Performance



#### UNIVERSAL VALVE CO., INC.

478 Schiller Street • Elizabeth, New Jersey 07206  
(800) 223-0741 • (908) 351-0606 • Fax: (908) 351-0369  
e-mail: [sales@universalvalve.com](mailto:sales@universalvalve.com)  
visit us at: [www.universalvalve.com](http://www.universalvalve.com)

